


1. PISCO's Vacuum pad series consists of the combination of vacuum pads and holders.

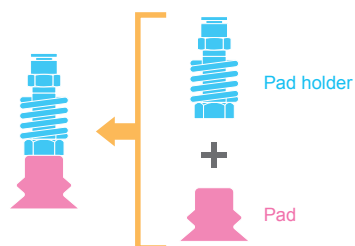


2. Vacuum pad and pad holder have a specific connection type depending on the size and shape.

Pad connection type	Insert type (Direct connection)		Mount type (Direct connection)		Screw type (Connection with screw)	
Connection configuration code	H3		T4 T8 T15 T40 (Exclusive to soft type & soft bellows type vacuum pads) PB8 PB15 (Exclusive to Vacuum pad for packaging bag) E10 E20 (Exclusive to Oval type vacuum pad)		M4 M6 M10 M20 G1 G2 G3 G4	

*As shown in above drawings, Vacuum pad and pad holder are connected with a screw or a rim.

3. Any Vacuum pad and pad holder can be connected, as long as their connection configuration codes are same.

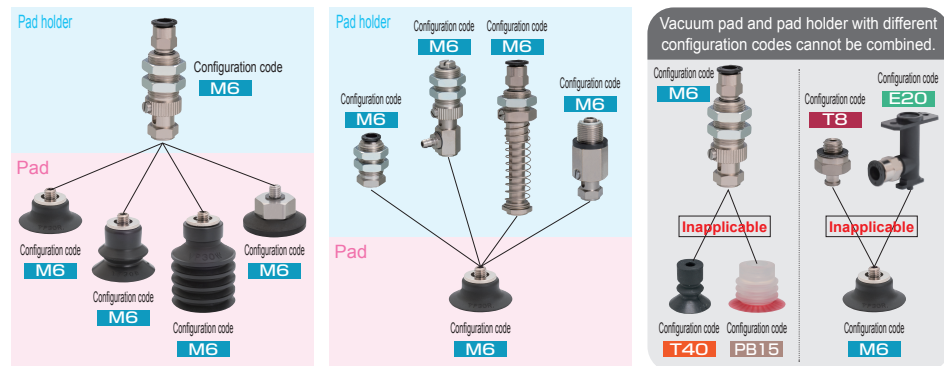

If you have purchased a pad and holder set but want to install a different pad or replace the holder with a different one...
→ Please check the connection configuration code of your pad or pad holder and select the one that matches the configuration code.

4. Please refer to the below chart for the "Connection Configuration Code". *Configuration codes are also listed on the page of model code list for each product.

Connection configuration code list (Holder)

Common holder

	Fixed type		Mini	Slim	Spring type		No cover	Low dust emission
	Mini	Standard			Standard			
Code	VPMA	VPA	VMC	VPSC	VPC	VPOC	VPLFC	
Type								
Configuration code	T4 T8 M4 M6	H3 T8 M4 M6 M10 M20 G1 G2 G3 G4	T4 T8 M4 M6	H3 T8	H3 T8 M4 M6 M10 M20 G1 G2 G3 G4	T8 M4 M6	T4 T8 M4 M6	
Code	VPMB	VPB	VPMD		VPD	VPOD	VPLFD	
Type								
Configuration code	T4 T8 M4 M6	H3 T8 M4 M6 M10 M20 G1 G2 G3 G4	T4 T8 M4 M6		H3 T8 M4 M6 M10 M20 G1 G2 G3 G4	T8 M4 M6	T4 T8 M4 M6	
Code	VPME	VPE			VPF			
Type								
Configuration code	T4 T8 M4 M6	H3 T8 M4 M6 M10 M20 T15 T40			H3 T8 M4 M6			

Common holder (Lightweight/Low profile)

	Top port		Side port	Dual side port
	Code	VPHC		VPHD
Type				
Configuration code	T15 T40 M4 M6	T15 T40 M4 M6 T8	T15 T40 M4 M6	
Code		VPHE		VPHD
Type				
Configuration code		T15 T40 M4 M6	T15 T40 M4 M6	

Special holder *Pads of other shapes cannot be installed.

	Top port		Side port
	Code	VPA	VPB
Type			
Configuration code	E10 E20	E10 E20	
Code	VPA	VPE	
Type			
Configuration code	PB8 PB15	PB8 PB15	


Connection configuration code list (Pad) (○: Available)

Pad type or application	Standard														Pad type or application
	Small	General	Deep	Bellows	Multi-bellows	Metal detectable	Skidproof	Pat Large suction flow type	Mark-free	Soft	Soft bellows	Sponge	Ultrathin	For packaging bag	
Code	R	R	A	B	W	BE, BD	K	F, FH	Q	L	LB	S	P	PB	E
0.7	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
1.5	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
3	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
4	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
6	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
8	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
10	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
15	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
20	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
25	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
30	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
35	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
40	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
50	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
60	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
70	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
80	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
100	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
150	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
200	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Some combinations are possible by using a conversion screw adapter.

H3, T4 and T8 can be converted to M4 or M6. M4 to M6 conversion is also available. For details, please see "Rearrangement parts" of each pad type.

Model Designation (Example)



(1) Vacuum Pad

(2) Pad size (3) Pad type (6) Connection configuration code *Required for Pad & screw set only. (○: Available)

Pad type or application	Small	General	Deep	Bellows	Multi-bellows	Metal detectable	Skidproof	Flat (Large suction flow type)	Mark-free	Soft	Soft bellows	Sponge	Ultrathin	For packaging bag	Pad type or application
Code	RM	R	A	B	W	BE, BD	K	F, FH	Q	L	LB	S	P	PB	Code
0.7	○	○	○	○	○	○	○	○	○	○	○	○	○	○	2x4
1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	3.5x7
1.5	○	○	○	○	○	○	○	○	○	○	○	○	○	○	4x10
2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	5x10
3	○	○	○	○	○	○	○	○	○	○	○	○	○	○	6x10
4	○	○	○	○	○	○	○	○	○	○	○	○	○	○	4x20
6	○	○	○	○	○	○	○	○	○	○	○	○	○	○	4x30
8	○	○	○	○	○	○	○	○	○	○	○	○	○	○	5x30
10	○	○	○	○	○	○	○	○	○	○	○	○	○	○	6x30
15	○	○	○	○	○	○	○	○	○	○	○	○	○	○	8x20
20	○	○	○	○	○	○	○	○	○	○	○	○	○	○	8x30
25	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
30	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
35	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
40	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
50	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
60	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
70	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
80	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
100	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
150	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
200	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

(4) Pad material (○: Available)

Code	N	S	U	F	SE	NE	G	HN	EP	FS	NH	YS2	YS4	MSF3	MSF5	MSS3	MSS5
Rubber material	Nitrile	Silicone	Urethane	Fluoro	Conductive silicone	Conductive NBR (Low resistance)	Food Sanit. Act compliant NBR	HNBR	EPDM	Fluoro-silicone	Oil proof NBR	Extra soft silicone	Iron powder type	SUS powder type	Metal detectable silicone		
Pad color	Black	Clear white	Dark blue	Gray	Black	Black	Light gray	Black	Black	Red-orange	Black	Pink	Blue	Reddish-brown	Dark-green	Brown	Green
Material code marking ¹⁾	None	None	None	None	SE	NE	None	HN	EP	None	None	None	None	SF	SF	SS	SS
Standard	General	Deep	Small														
Soft	L																
Soft bellows	LB																
Skidproof	K																
Bellows	B																
Multi-bellows	W																
For packaging bag	PB																
Metal Detectable	BE																
Ultrathin	P																
Flat	F																
Flat large suction flow	FH																
Oval	E																

● Mark-free type (Pad type code: Q)

Code	K	M	KE
Resin material	PEEK	POM	Conductive PEEK
Pad color	Beige	White	Black

● Sponge type (Pad type code: S)

Code	S	C
Rubber material	Silicone	Chloroprene
Pad color	Dark-orange	Black

¹⁾ For vacuum pads in black color (SE: Conductive silicone, NE: Conductive NBR (low resistance), HN: HNBR and EP: EPDM) and Vacuum pad Metal Detectable type, the pad material code is marked on the top or the side of the vacuum pad for material identification. (The marking on black vacuum pads has started since Oct. 2023 gradually.)



(5) Surface treatment (Optional) (○: Available)

Code			No code	-NF	-SF	-DL	-ER	-FG
Surface treatment			None	Fiber surface		DLC. coating	Reformed surface	Fluoro-coating
				Nylon fiber	Silk fiber			
			—					
Applicable pad material			—	Silicone (S) Fluoro (F)	Silicone (S) Fluoro (F)	Silicone (S) Fluoro (F) Conductive silicone (SE)	Nitrile (N) Conductive NBR (NE)	Silicone (S) Conductive silicone (SE) Extra soft silicone (YS2, YS4)
Pad type	Standard	General	R	—	○	○	○	○
		Deep	A	—	○	○	○	○
		Small	RM	—	—	—	○	○
	Soft		L	—	○	○	○	○
		Soft bellows	LB	—	○	○	○	○
		Skidproof	K	—	—	—	—	—
	Bellows		B	—	○	○	○	○
		Multi-bellows	W	—	—	—	○	○
		For packaging bag	PB	—	—	—	—	○
	Metal Detectable	BE, BD	—	—	—	—	—	
	Ultrathin	P	—	—	—	○	○	
	Flat	F	—	—	—	○	○	
	Flat large suction flow	FH	—	—	—	○	○	
Mark-free	Q	—	—	—	—	—		
Sponge	S	—	—	—	—	—		
Oval	E	—	—	—	○	○		

*Some surface treatments are not available depending on pad size.

Please refer to page 370 for the details of each pad surface type and treatment for Suction Mark-free.


(6) Connection configuration code (Required for Pad & screw set only.) Please refer to the Pad size and type list on the 374 page.

Code	No code	-M4	-M6	-M10	-M20	-M5 ^(*)
Connection config. code	—	M4	M6	M10	M20	—
Thread size	Pad rubber only	M4×0.7	M6×1	M10×1.5	M20×2	M5×0.8

*M5 thread is used for mounting on non-PISCO holders. Contact us for the price of screw set.

(7) Mark-free resin attachment material (Bellows type only) (Optional)

Code	No code	-QK	-QM	-QKE
Resin material	—	PEEK	POM	Conductive PEEK (Volume resistance: 10 ¹² to 10 ¹⁵ Ω·cm)
	—			

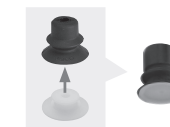

¹⁾ Selectable for Bellows type pad dia. 10 to 30 mm.

²⁾ Resin attachment cannot be installed when selecting surface treatment.

³⁾ Resin attachment cannot be installed when selecting Extra soft silicone for pad material.

(8) -S3 spec. (Required for Pad & screw set only) (Optional)

Code	No code	-S3
Metal material	Standard	No copper-based metallic materials used in flow paths

Vacuum pad / Pad & screw set

Holders with the same "connection configuration code" (M4, M6, etc.) can be connected. For connectable holders, please see the page of Pad holder only (page 384-).

Flat series, Pad rubber alone										Flat series, Pad & screw set									
○: Available as standard item										○: Available as standard item									
Model code	④ Pad rubber material						Connection config. code	Model code	④ Pad rubber material						Connection config. code				
	N	S	U	F	SE	NE			N	S	U	F	SE	NE		-S3			
	Nitrile	Silicone	Urethane	Fluoro	Conductive silicone	Conductive NBR (Low resistance)			Nitrile	Silicone	Urethane	Fluoro	Conductive silicone	Conductive NBR (Low resistance)		-S3 spec.			
VP10F④⑤	○	○	○	○	○	○	M4⑧⑨	VP10F④⑤-M4⑧	○	○	○	○	○	○	○	M4			
VP15F④⑤	○	○	○	○	○	○		VP15F④⑤-M4⑧	○	○	○	○	○	○	○				
VP20F④⑤	○	○	○	○	○	○	M6⑧⑨	VP20F④⑤-M6⑧	○	○	○	○	○	○	○	M6			
VP25F④⑤	○	○	○	○	○	○		VP25F④⑤-M6⑧	○	○	○	○	○	○	○				
VP30F④⑤	○	○	○	○	○	○		VP30F④⑤-M6⑧	○	○	○	○	○	○	○				

 Flat large suction flow series, Pad rubber alone							 Flat large suction flow series, Pad & screw set							
○: Available as standard item							○: Available as standard item							
Model code	④ Pad rubber material					Connection config. code	Model code	④ Pad rubber material					Connection config. code	
	N	S	F	SE	NE			N	S	F	SE	NE		⑤
	Nitrile	Silicone	Fluoro	Conductive silicone	Conductive NBR (Low resistance)			Nitrile	Silicone	Fluoro	Conductive silicone	Conductive NBR (Low resistance)		-S3 spec.
VP10FH④⑤	○	○	○	○	○	M4⑧	VP10FH④⑤-M4⑧	○	○	○	○	○	○	M4
VP15FH④⑤	○	○	○	○	○		VP15FH④⑤-M4⑧	○	○	○	○	○	○	
VP20FH④⑤	○	○	○	○	○	M6⑧	VP20FH④⑤-M6⑧	○	○	○	○	○	○	M6
VP25FH④⑤	○	○	○	○	○		VP25FH④⑤-M6⑧	○	○	○	○	○	○	
VP30FH④⑤	○	○	○	○	○		VP30FH④⑤-M6⑧	○	○	○	○	○	○	





P.642

Mark-free series,
Resin pad alone





P.642

Mark-free series,
with Flexible Swing Joint

Model code	○: Available as standard item			Connection config. code	Model code	○: Available as standard item			Connection config. code	
	④ Pad rubber material					④ Pad rubber material				
	K	M	KE			K	M	KE		
	PEEK	POM	Conductive PEEK			PEEK	POM	Conductive PEEK		
VP10Q④	○	○	○	M4①	VP10Q④-M4⑧	○	○	○	○	M4
VP20Q④	○	○	○	M6①	VP20Q④-M6⑧	○	○	○	○	M6
VP30Q④	○	○	○		VP30Q④-M6⑧	○	○	○	○	



Sponge series, Pad rubber alone

P.656



Sponge series, Pad & screw set

P.656

○: Available as standard item ④ Pad rubber material C S Chloroprene Silicone				Connection config. code	○: Available as standard item ④ Pad rubber material ⑧ C S -S3 Chloroprene Silicone -S3 spec.				Connection config. code
Model code					Model code				
VP10S④	○	○		M8④①	VP10S④-M6⑧	○	○	○	M8
VP15S④	○	○			VP15S④-M6⑧	○	○	○	
VP20S④	○	○			VP20S④-M6⑧	○	○	○	
VP25S④	○	○			VP25S④-M6⑧	○	○	○	
VP30S④	○	○			VP30S④-M6⑧	○	○	○	
VP35S④	○	○		M10④①	VP35S④-M6⑧	○	○	○	M10
VP50S④	○	○			VP50S④-M6⑧	○	○	○	
VP70S④	○	○			VP70S④-M10	○	○	(*)	
VP100S④	○	○			VP100S④-M10	○	○	(*)	

- Notes**
- *1. A pad screw is required to mount on the holder. If you do not have a pad screw, please select from the Pad & screw set.
- *2. A Flexible Swing Joint is required to mount on the holder. If you do not have a Flexible Swing Joint, please select from the Mark-free series, with Flexible Swing Joint set.
- *3. For Pad & screw set of Sponge series 70 mm and 100 mm pad dia., the standard spec. is equivalent to "-S3" spec.

CAD data is available at PISCO website.

Packaging specifications 1 pc./bag

Options
⑤ : Surface treatment
⑧ : -S3 ⇒ -S3 spec.

Holders with the same "connection configuration code" (E10, E20, etc.) can be connected. For connectable holders, please see the page of Pad holder only (page 384-).

Oval series, Pad rubber alone												
Model code	○: Available as standard item											
	④ Pad rubber material											
	N	S	U	F	SE	NE	HN	EP				
VP2×4E④⑤	○	○	○	○	○	○	○	○				
VP3.5×7E④⑤	○	○	○	○	○	○	○	○				
VP4×10E④⑤	○	○	○	○	○	○	○	○				
VP4×20E④⑤	○	○	○	○	○	○	○	○				
VP4×30E④⑤	○	○	○	○	○	○	○	○				
VP5×10E④⑤	○	○	○	○	○	○	○	○				
VP5×20E④⑤	○	○	○	○	○	○	○	○				
VP5×30E④⑤	○	○	○	○	○	○	○	○				
VP6×10E④⑤	○	○	○	○	○	○	○	○				
VP6×20E④⑤	○	○	○	○	○	○	○	○				
VP6×30E④⑤	○	○	○	○	○	○	○	○				
VP8×20E④⑤	○	○	○	○	○	○	○	○				
VP8×30E④⑤	○	○	○	○	○	○	○	○				

Oval series, Pad & screw set												
Model code	○: Available as standard item											
	④ Pad rubber material											
	N	S	U	F	SE	NE	HN	EP	-S3			
VP2×4E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP3.5×7E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP4×10E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP4×20E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP4×30E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP5×10E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP5×20E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP5×30E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP6×10E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP6×20E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP6×30E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP8×20E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			
VP8×30E④⑤-M6⑧	○	○	○	○	○	○	○	○	○			


- Notes**
- *A pad screw is required to mount on the holder. If you do not have a pad screw, please select from the Pad & screw set.
- CAD data is available at PISCO website.
- Packaging specifications 1 pc./bag
- Options
⑤ : Surface treatment
⑧ : -S3 ⇒ -S3 spec.

Available pad size and material for surface treatment (Oval series)


Pad dia. (mm)	⑤ Surface treatment code		
	-DL	-ER	-FG
2×4	○	○	○
3.5×7	○	○	○
4×10	○	○	○
4×20	○	○	○
4×30	○	○	○
5×10	○	○	○
5×20	○	○	○
5×30	○	○	○
6×10	○	○	○
6×20	○	○	○
6×30	○	○	○
8×20	○	○	○
8×30	○	○	○
Material	S, F, SE	N, NE	S, SE

Vacuum Pad Configuration


Pad dia. : $\phi 0.7, \phi 1, \phi 1.5, \phi 2, \phi 3, \phi 4$ mm

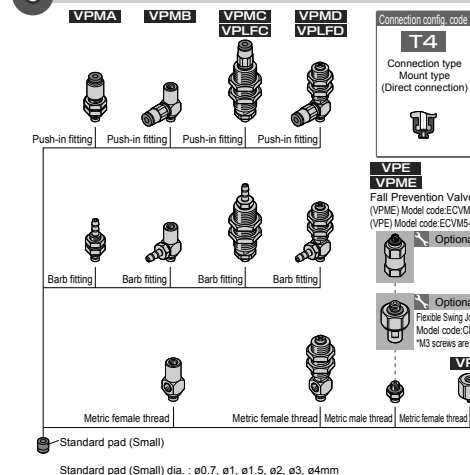



Pad dia. : $\phi 1, \phi 2, \phi 3, \phi 4$ mm

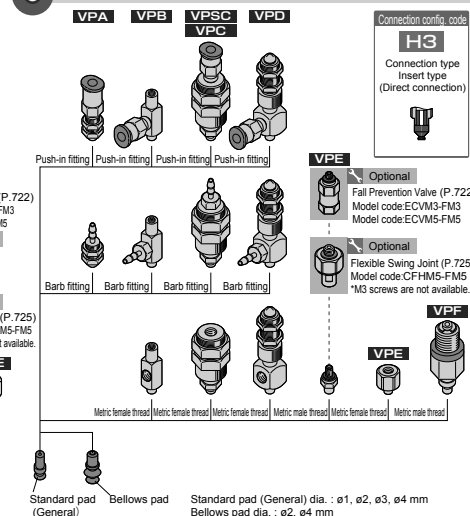

Pad dia. : $\phi 6, \phi 8, \phi 10, \phi 15, \phi 20$ mm



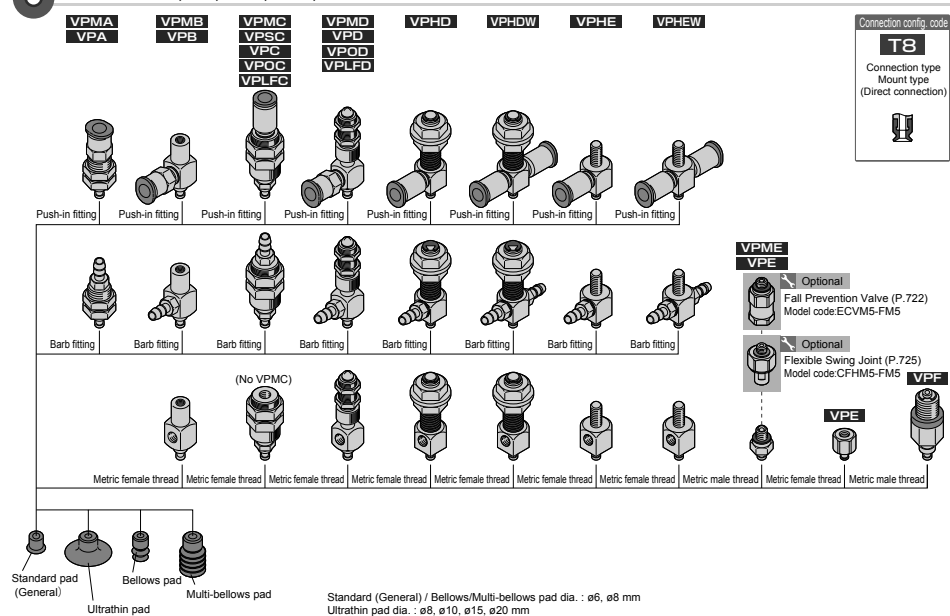


Pad dia. : $\phi 4, \phi 6, \phi 8, \phi 10, \phi 15$ mm


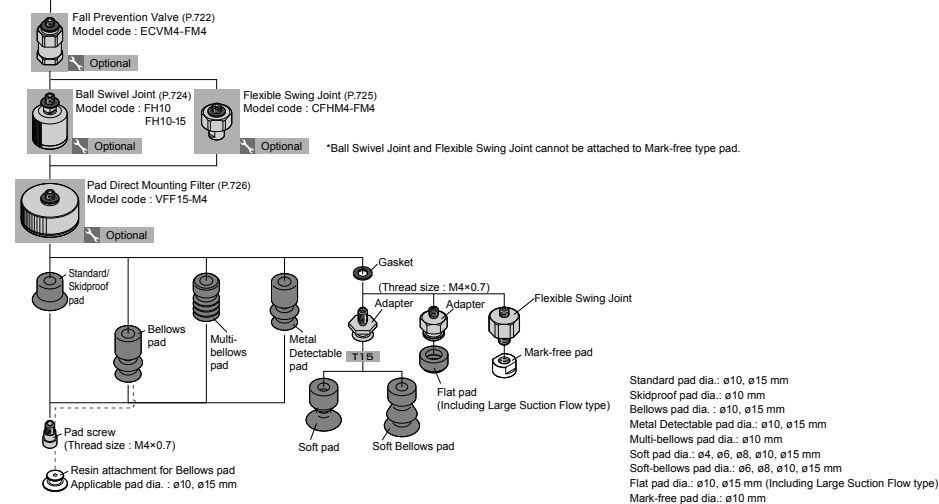
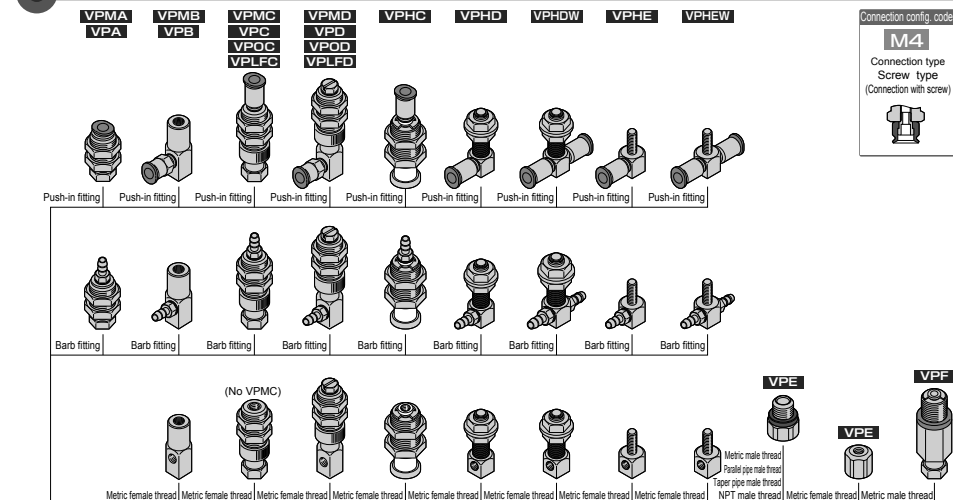


Vacuum Pad Configuration




Pad dia. : $\varnothing 10$, $\varnothing 15$, $\varnothing 20$, $\varnothing 25$, $\varnothing 30$, $\varnothing 35$, $\varnothing 40$, $\varnothing 50$ mm

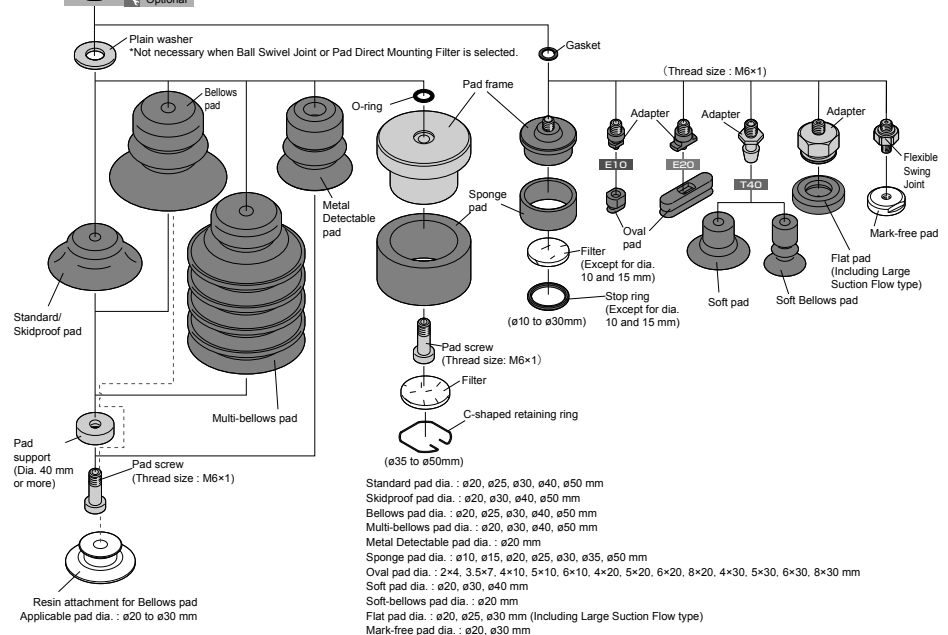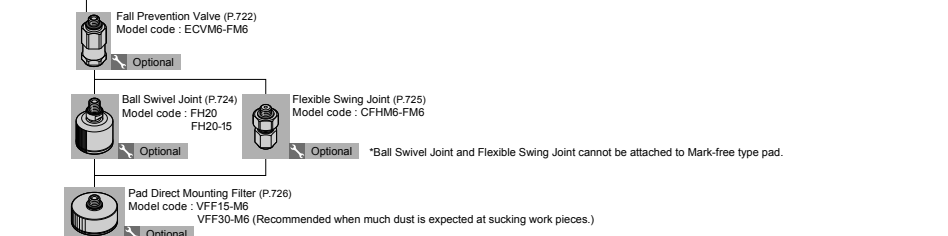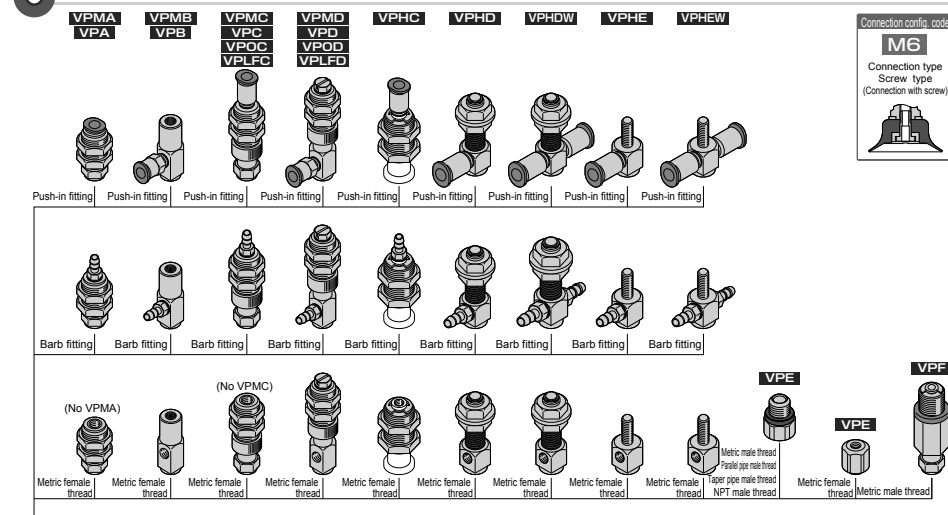

Pad dia. : $\varnothing 60$, $\varnothing 70$, $\varnothing 80$, $\varnothing 100$ mm

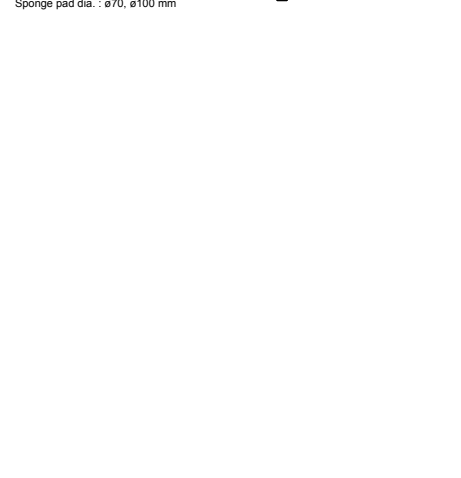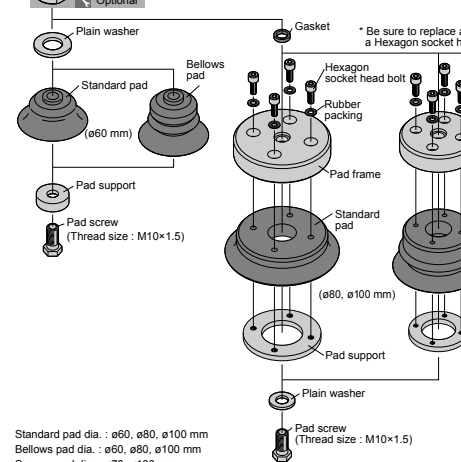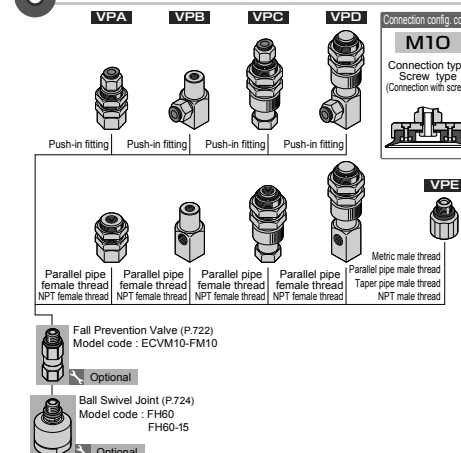


Pad dia. : $\varnothing 150$, $\varnothing 200$ mm

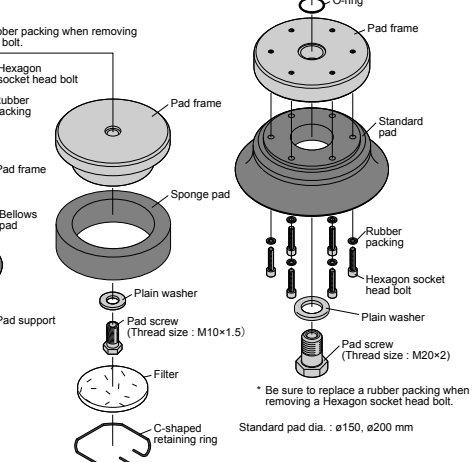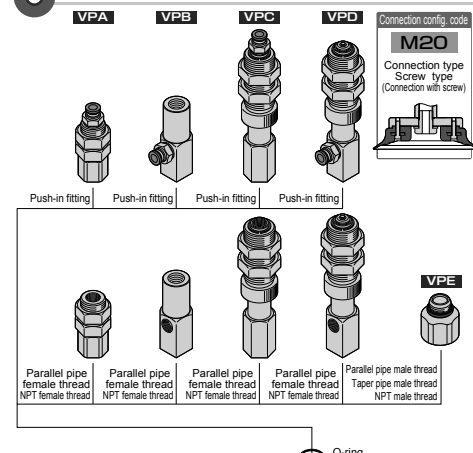


Vacuum Pad Configuration


● Pad dia. : $\varnothing 4, \varnothing 6, \varnothing 8, \varnothing 10, \varnothing 15$ mm (Exclusive to Soft and Soft Bellows type)

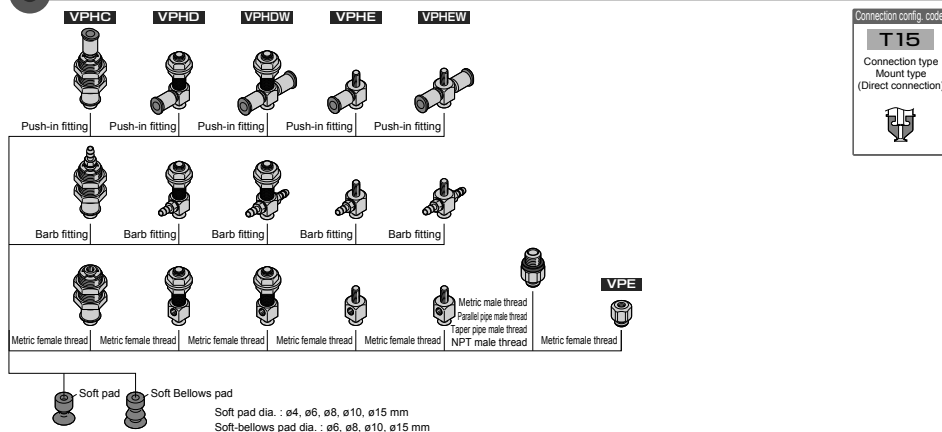


● Pad dia. : $\varnothing 20, \varnothing 30, \varnothing 40$ mm (Exclusive to Soft and Soft Bellows type)

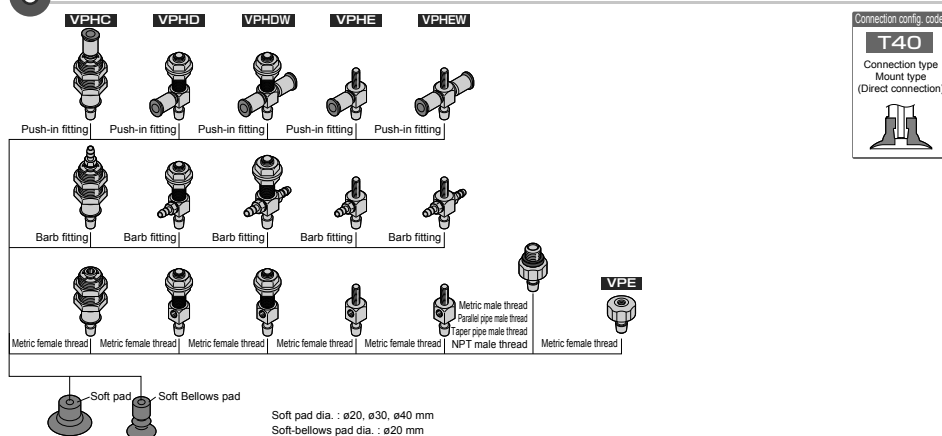


● Pad dia. : $\varnothing 20, \varnothing 25$ mm (Exclusive to Vacuum pad for packaging bag)

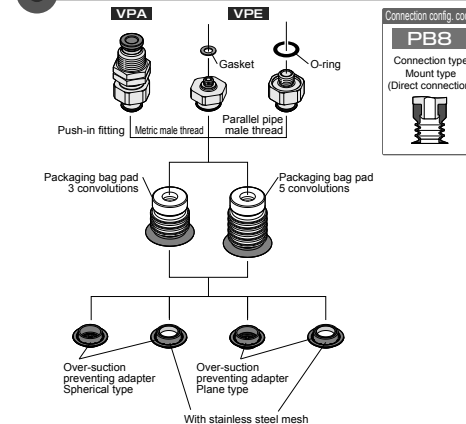

● Pad dia. : $\varnothing 30, \varnothing 40, \varnothing 50$ mm (Exclusive to Vacuum pad for packaging bag)

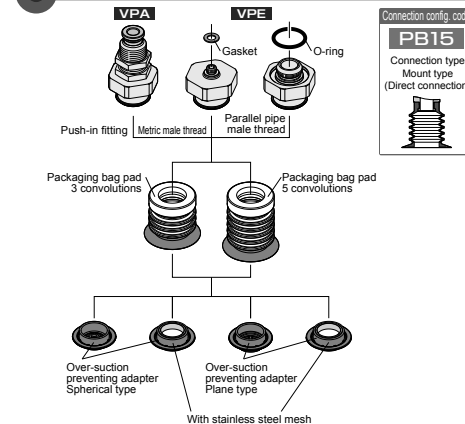

● Pad size : 2×4, 3.5×7, 4 to 6×10 mm (Exclusive to Oval type)

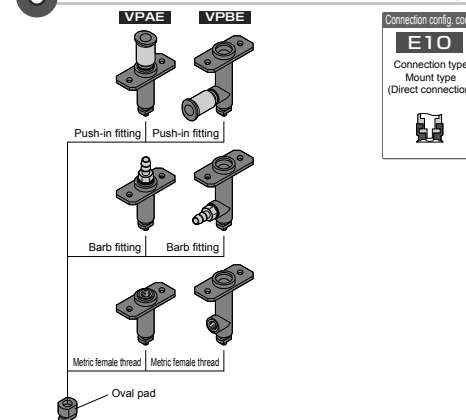

● Pad size : 4 to 8×20 mm, 4 to 8×30 mm (Exclusive to Oval type)

